

# Outlet Protection/Velocity Dissipation Devices



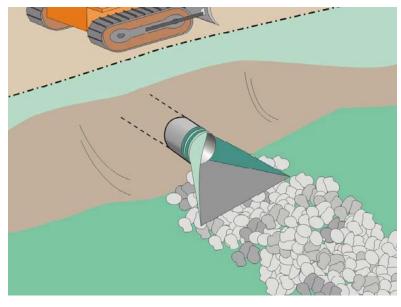

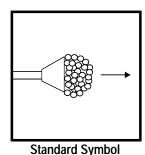

**BMP Objectives** 

- Soil Stabilization
- Sediment Control
- Tracking Control
- O Wind Erosion Control
- O Non-Storm Water Management
- Materials and Waste Management

## Definition and Purpose

These devices are placed at pipe outlets to prevent scour and reduce the velocity and/or energy of storm water flows.


## Appropriate Applications

- These devices may be used at the following locations:
  - Outlets of pipes, drains, culverts, slope drains, diversion ditches, swales, conduits or channels.
  - Outlets located at the bottom of mild to steep slopes.
  - Discharge outlets that carry continuous flows of water.
  - Outlets subject to short, intense flows of water, such as flash floods.
  - Points where lined conveyances discharge to unlined conveyances.
- This BMP may be implemented on a project-by-project basis with other BMPs when determined necessary and feasible by the Resident Engineer (RE).

#### Limitations

- Loose rock may have stones washed away during high flows.
- Grouted riprap may break up in areas of freeze and thaw.
- If there is not adequate drainage, and water builds up behind grouted riprap, it may cause the grouted riprap to break up due to the resulting hydrostatic pressure.

# Outlet Protection/Velocity Dissipation Devices

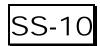


## Standards and Specifications

- There are many types of energy dissipaters, with rock being the one that is represented in the figure on Page 3. Please note that this is only one example and the RE may approve other types of devices proposed by the contractor.
- Install riprap, grouted riprap, or concrete apron at selected outlet. Riprap aprons are best suited for temporary use during construction.
- Carefully place riprap to avoid damaging the filter fabric.
- For proper operation of apron:
  - Align apron with receiving stream and keep straight throughout its length. If a curve is needed to fit site conditions, place it in upper section of apron.
  - If size of apron riprap is large, protect underlying filter fabric with a gravel blanket.
- Outlets on slopes steeper than 10% shall have additional protection.

### Maintenance and Inspection

- Inspect temporary measures prior to the rainy season, after rainfall events, and regularly (approximately once per week) during the rainy season.
- Inspect apron for displacement of the riprap and/or damage to the underlying fabric. Repair fabric and replace riprap that has washed away.
- Inspect for scour beneath the riprap and around the outlet. Repair damage to slopes or underlying filter fabric immediately.
- Temporary devices shall be completely removed as soon as the surrounding drainage area has been stabilized, or at the completion of construction.



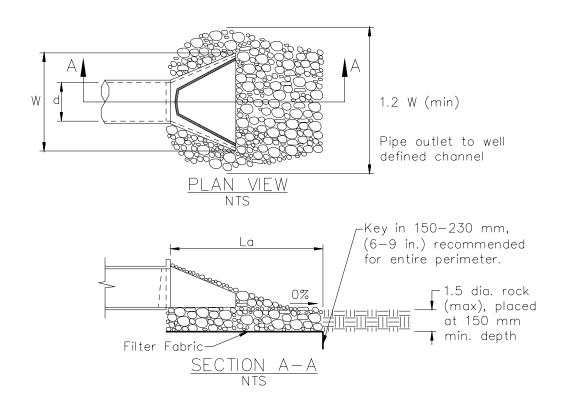

Pipe Diameter	Discharge	Apron Length, La	Rip Rap
mm	m <sup>3</sup> /s	m	D <sub>50</sub> Diameter Min
			mm
300	0.14	3	100
	0.28	4	150
450	0.28	3	150
	0.57	5	200
	0.85	7	300
	1.13	8	400
600	0.85	5	200
	1.13	8	200
	1.42	8	300
	1.70	9	400
For larger or higher flows, consult a Registered Civil Engineer			

Source: USDA – SCS